

Installation instructions

Sonniboy Ford KA 3-door, small rear window + rear window


Ford Ka RU8 2008 →

0078211BC



A

2x

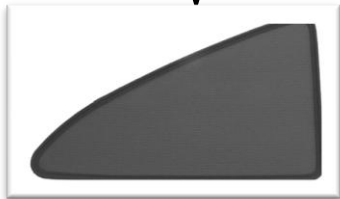



B



2x



C

2x

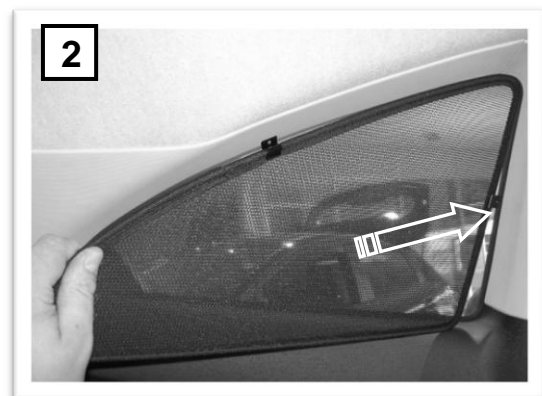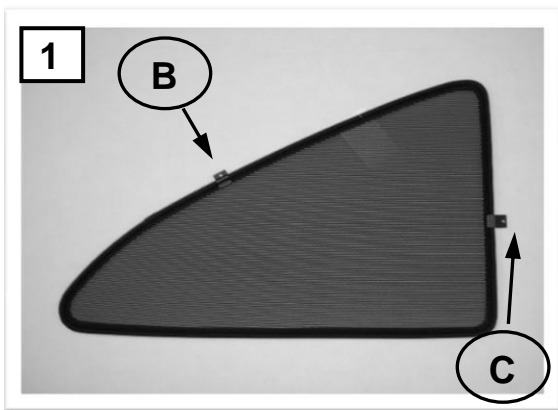

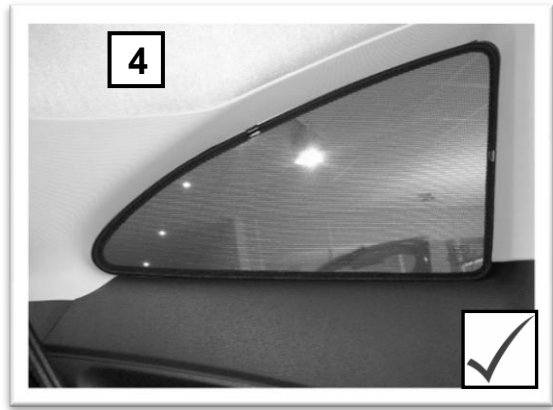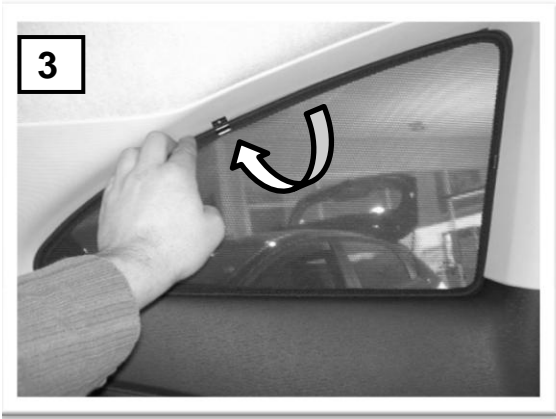

D
↓
1x

B
↓
2x

